



1. Drill holes in the concrete ceiling based on the holes of the upper cover plate. Drill hole diameter  $\varnothing 6$ . Tighten 4 pcs of  $\varnothing 6$  plastic screws into the drilled holes.

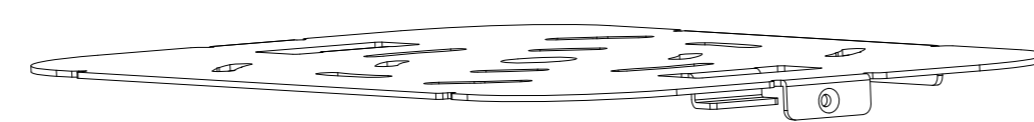


Put on the upper cover plate

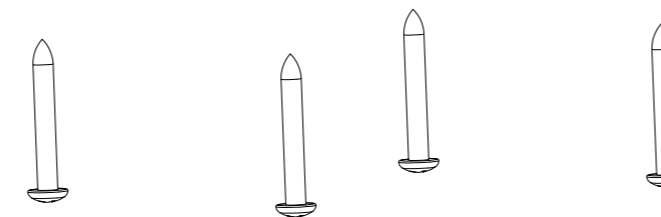

2. Install the upper cover of the mount on the ceiling with 4 pcs of M4\*30 tapping screws.



3. Connect the lower cover plate with the base of the camera with unified screw threads (1/4-20UNC\*3/8) (Please make sure you put a layer of silicone rubber pad between the lower cover plate and the base of the camera. Rubber pad is included in the package.)

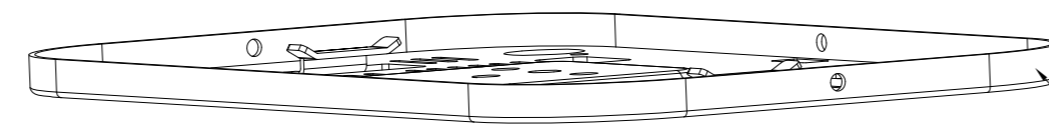

4. Connect the camera with the lower cover plate together to the upper cover plate. Tighten M3\*6 screws on the side to prevent the camera from falling off.

Lower cover plate



Camera